


## Front Panel Illustration

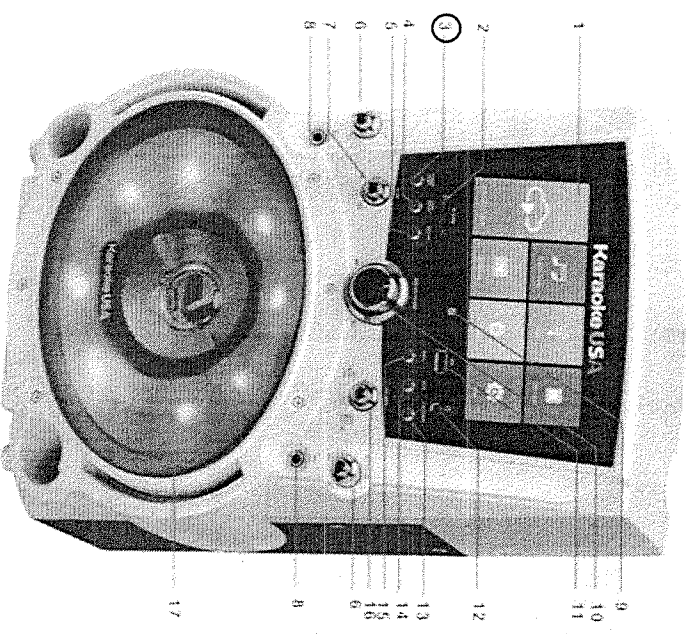

1. 7" HD LCD Color Touch-screen Display
2. SD CARD: SD slot to accommodate SD cards
3. POWER ON/OFF button
4. LIGHT ON/OFF: Flashing LED Lights ON/OFF Button
5. RETURN: Return to previous screen
6. MIC VOLUME: Microphone Volume Control
7. ECHO: Adjust ECHO Up or Down
8. MIC INPUT: Microphone input jacks (LEFT and RIGHT)
9. RLED: Remote Control/Infrared red Receiver
10. MASTER VOLUME: Master Volume Control
11. USB: USB slot to accommodate USB
12. EARPHONE: Standard 3.5mm Earphone jack
13. PLAY/PAUSE: Select a menu item / play or pause a song
14. NEXT: NEXT song
15. PREV: PREVIOUS song
16. BALANCE: MUSIC ONLY or MUSIC & VOCAL
17. SPEAKER: Audio speaker