

 
How to Select and Play

Power on/off

Press and hold the power button for 5 seconds to properly boot up the machine. Likewise, press and hold button 5 seconds to properly turn the machine off. Depending on applications and songs, allow 60 seconds to completely boot up machine.


Home Screen

After turning on the system, the Home Screen displays short cut icons as shown below.

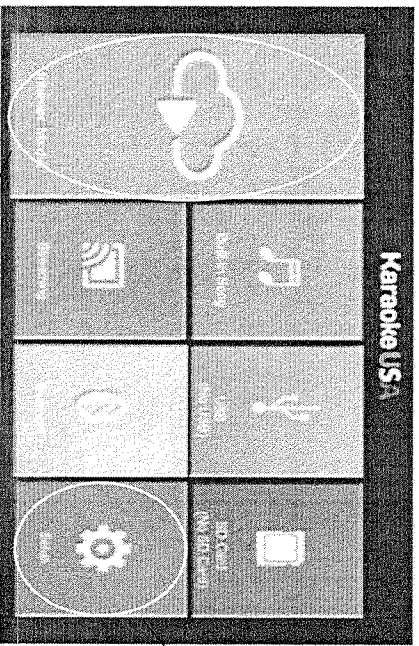


1. Wi-Fi

 Connecting to your Wi-Fi is the most important step to getting the most from your new system. Touch Wi-Fi(icon) and a list of available Wi-Fi networks will appear. You will need the owner's password to complete the connection. If successful, it will display "Connected" and the system is ready to access the internet and application stores.

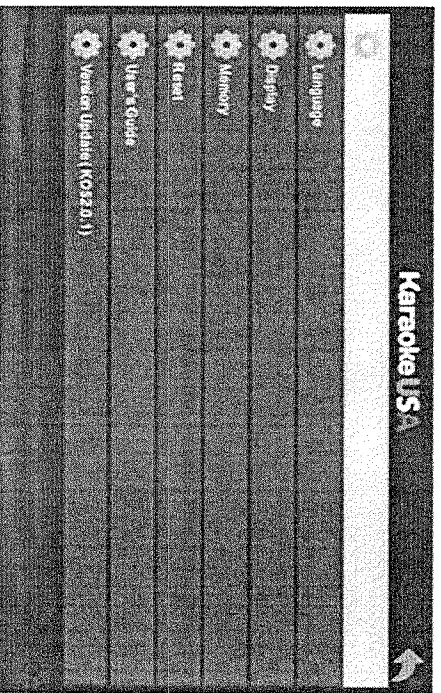

2 Internet Media

 Touch and press the "Internet Media" icon and press the "YouTube" app.

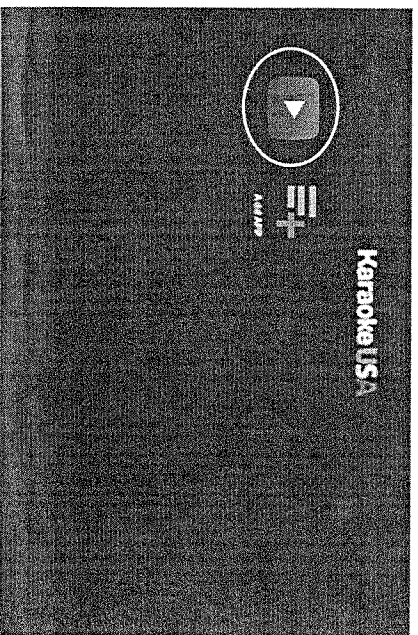

Rental Includes:

- Karaoke Machine
- **Two** Microphones*
- Remote Control
- Smart Device Holder
- Charging Cable

Please Return ALL Pieces at the End of the Rental Period

*If a microphone is lost or damaged there will be a \$30 charged added to replace it